



LASER[®]

Part No. 4807

Jauge huile - Audi



When you have finished with
this bottle please recycle it

www.lasertools.co.uk



Distributed by The Tool Connection Ltd

Kington Road, Southam, Warwickshire CV47 0DR
T +44 (0) 1926 815000 F +44 (0) 1926 815888
info@toolconnection.co.uk www.toolconnection.co.uk

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.

www.lasertools.co.uk

www.lasertools.co.uk

Instructions d'utilisation

Précautions et préparation :

- Vérifiez que le véhicule est sur un sol horizontal.
- L'huile doit être à une température minimum de 60 degrés C/140 degrés F.
- Arrêtez le moteur et attendez 5 minutes pour que le niveau d'huile se stabilise.

Réglage 4807

Tournez la bague de réglage sur la valeur indiquée ci-dessous pour la liste des véhicules ci-dessous et serrez le système de verrouillage. Ceci fixe la longueur de la jauge sur le moteur.

Insérez l'outil 4870 dans le tube jauge sur le véhicule jusqu'à ce que la bague de réglage touche le haut du tube.

Enlevez la jauge et relevez le niveau sur l'échelle inférieure.

Année	Type moteur	Réglage bague	Minimum échelle inférieure	Maximum échelle inférieure
2009 et suivantes	2.0 TFSi	39	0	24
2009 et suivantes	3.2 FSi	123	0	13
2009 et suivantes	3.0 turbocompresseur	123	0	13
2009 et suivantes	4.2 FSi	175	0	23
2009 et suivantes	2.0 TDi CR	62	0	24



LASER[®]

Part No. 4807

Oil Dipstick - Audi



When you have finished with
this bottle please recycle it

www.lasertools.co.uk



Distributed by The Tool Connection Ltd

Kington Road, Southam, Warwickshire CV47 0DR
T +44 (0) 1926 815000 F +44 (0) 1926 815888
info@toolconnection.co.uk www.toolconnection.co.uk

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.

www.lasertools.co.uk

www.lasertools.co.uk

How to Use

Precautions and Preparation:

- Ensure the vehicle is on level ground
- The oil must be up to a minimum temperature of 60° C/140° F
- Switch off engine and wait 5 minutes for oil level to settle

Setting the tool

1. Set the adjustable ring to the measurement shown below for the vehicle list below and tighten the lock.
2. This sets the length of the dipstick to the engine.
3. Insert the tool into the dip stick tube provided on the vehicle until the adjustable ring touches the top of the tube.
4. Remove the dipstick and read off the level on the lower scale.

Year	Engine Type	Ring Setting	Lower Scale Minimum	Lower Scale Maximum
2009 on	2.0 TFSi	39	0	24
2009 on	3.2 FSi	123	0	13
2009 on	3.0 Supercharged	123	0	13
2009 on	4.2 FSi	175	0	23
2009 on	2.0 TDi CR	62	0	24



LASER[®]

Part No. 4807

Varilla medidora de aceite

- Audi



When you have finished with
this bottle please recycle it

www.lasertools.co.uk



Distributed by The Tool Connection Ltd

Kington Road, Southam, Warwickshire CV47 0DR
T +44 (0) 1926 815000 F +44 (0) 1926 815888
info@toolconnection.co.uk www.toolconnection.co.uk

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.

www.lasertools.co.uk

www.lasertools.co.uk

instrucciones de uso

Precauciones y preparativos:

- Comprobar que el vehículo se encuentra sobre un suelo plano
- El aceite debe encontrarse a una temperatura mínima de 60 °C/140 °F
- Desconectar el motor y esperar 5 minutos para que el nivel de aceite se estabilice

Ajuste - 4807

Fijar el anillo ajustable en la medición mostrada a continuación según la lista de vehículos y apretar la fijación. Con ello se fija la longitud de la varilla de medición en el motor.

Introducir el 4870 en el tubo de la varilla de medición del vehículo hasta que el anillo ajustable entre en contacto con la parte superior del tubo.

Retirar la varilla de medición y realizar la lectura del nivel en la escala inferior.

Año	Tipo motor	Ajuste de anillo	Mínimo escala inferior	Máximo escala inferior
2009 en adelante	2.0 TFSi	39	0	24
2009 en adelante	3.2 FSi	123	0	13
2009 en adelante	3.0 Supercharged	123	0	13
2009 en adelante	4.2 FSi	175	0	23
2009 en adelante	2.0 TDi CR	62	0	24