

Porsche 997.1 Carrera Stainless Steel Sports Centre Grille


Kit Contents: -

- 1 off Centre Grille
- 3 off 3/4" Screw



Centre Mesh Grille Fitting Instructions

1. Place the Grille against the aperture and then apply masking tape in the area where the location pins are (see fig1).
2. Mark the pin position onto the masking tape as a line running straight back into the aperture, and then measure 34mm from the bumper insert forwards. Where the measurements hits the marked lines drill two 3mm holes.
3. Remove the tape.
4. Place the grille location pins into the holes and locate the mesh into the aperture. If you need to adjust the hole position only do so from side to side and not from front to back.
5. Holding the grill in position screw into position through the 3 location washers using the screws provided. Do not over tighten.
6. The grille is now complete.

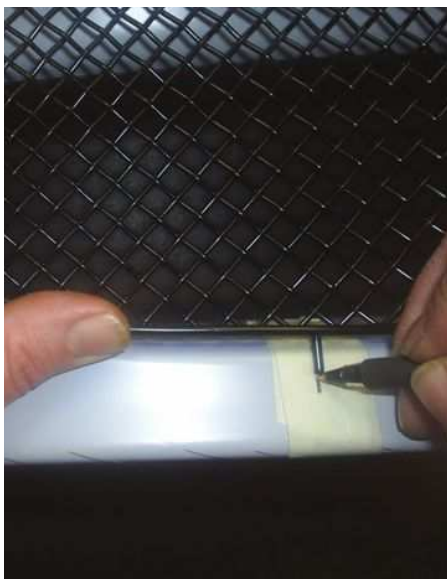

Porsche 997.1 Carrera **Stainless Steel Sports Side Grille Kit**

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Lower Grille

- 2. off 3/4" Screw

**Upper Side Mesh Grille Fitting Instructions**

1. Hook clip into Position
2. Flex the grille in the middle until the other end clips into place.
3. Screw in top corner through the washer.(Do not over tighten)
4. The Grilles are now complete

**Lower Side Mesh Grille Fitting Instructions**

1. Drill a 3mm Dia hole into the top corner of the aperture as picture, 5mm from face of insert.
2. Fit the grille location pin into the drilled hole.
3. Clip the other end in place making sure clip is in position with a screwdriver as shown.
4. The grilles are now complete



THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.