

**Warning**

Incorrect or out of phase camshaft timing can result in contact between the valve head and the piston crown causing damage to the engine.

Safety

Ensure that Health and Safety, local authority and general workshop practice regulations are adhered to when using tools. **DO NOT** use tools if there is any sign of damage. Maintain tools in good and clean condition for best and safest performance. Ensure that a vehicle which has been jacked up is adequately supported with axle stands. Wear approved eye protection. Account for all tools, locking bolts, pins and parts being used and do not leave them in or near the engine.

Important

These instructions are provided as a guide only. Always refer to the vehicle manufacturer's workshop manual or refer to the appropriate Auto Data chapter. Timing Belt and Chain books are available through The Tool Connection.

Replacement parts

order direct from The Tool Connection and not through your distributor.


Camshaft Alignment Tools for:

Porsche 911

(engine codes 996/997)
up to 2001

Boxster

(engine codes 986/987)
up to 2002.

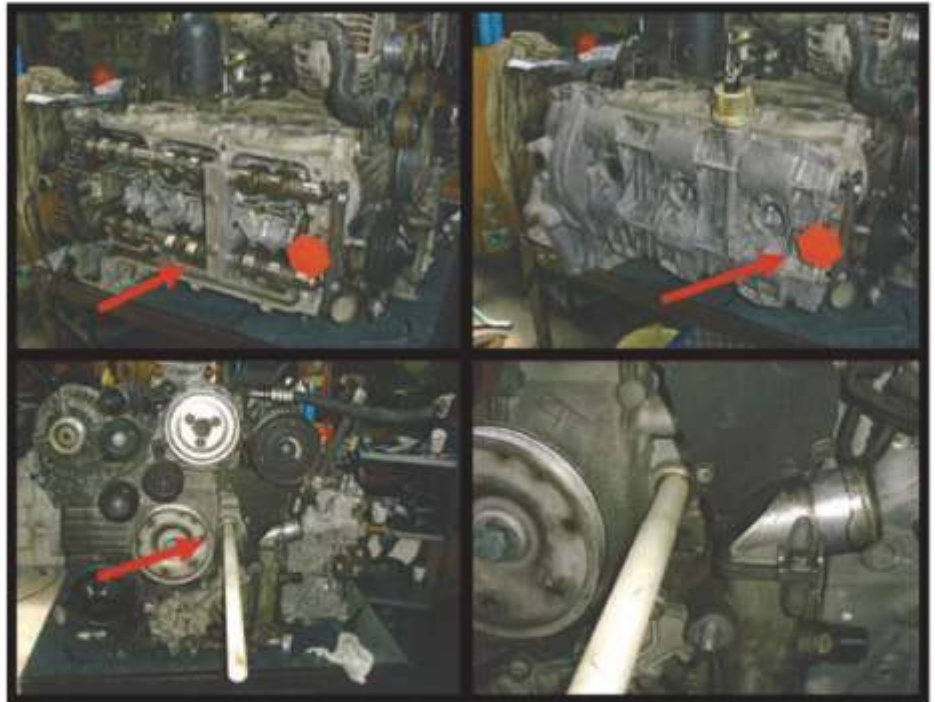

Contents

CODE	DESCRIPTION	OEM CODE
C396	TDC Alignment Pin	9595
C397	Camshaft Locking Tool	9612
C398	Camshaft Supports (2)	9611
C399	Camshaft Holding Tool (2)	9634
C400	Alignment Tool	9608
C401	Pin Driver and Extensions	9602